

What is the SmartBoard 800?

The SmartBoard 800 is an interactive board, connected to a computer and controlled by a user's fingertips and stylus. The stylus produces digital ink that can write text directly on whatever is projected on the board. SmartBoard accessories include a stylus and eraser. Wireless Keyboard and mouse can also be used to control the screen.

Dry erase markers are prohibited from use on the SmartBoard.

How do I access the SmartBoard 800?


- In CCHS, a SmartBoard is set up to a computer in room 240.
- The room can be reserved via Chrisanne Rancati or Michelle Webb in ResSchedule.
- If you need to hook up additional hardware (e.g. DVD Player, Flashdrive, etc) add a request to your reservation for a Tech Team member to help you set that up .

Procedure and/or Tips to use the SmartBoard 800:

1. Ensure your computer is turned on. The computer, in room 240, is located on the wall below the board.
2. Press the Power button on the left side of the SmartBoard tray. The Smartboard in on when it lights up green.
3. If both power buttons are on, you will see the CHS logon screen. Login with your CHS credentials.

Tip #1: Although you can use the touch keyboard on the SmartBoard, it is recommended that you login using the wireless keyboard to keep your password secure.

4. **If you are using audio**, check this next. Check the audio in 3 places:
 - Check that the SmartBoard audio knob on the tray is turned up to 3
 - Check that the Computer audio in the lower right part of your screen is only half or less than half.
 - Check that the sound Start Menu>Control Panel>Sound has 2 icons in the pop up box.

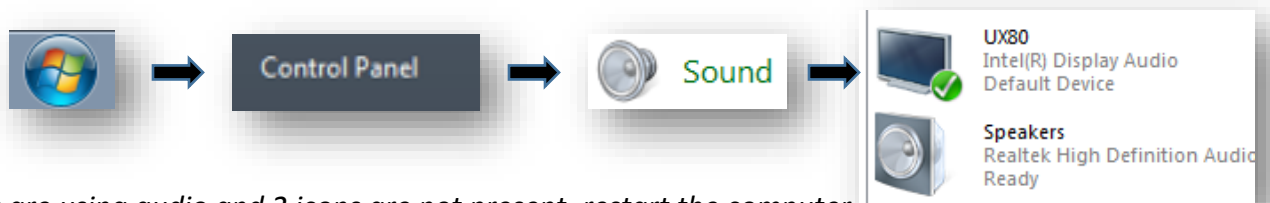

Tip #2: If you are using audio and 2 icons are not present, restart the computer.

5. Use your fingertip or stylus to tap and guide the content on the board. Use the stylus to write or highlight information.


Tip #3: If you want to change the color on the stylus, tap the Smartboard and click this icon:


Or

Use the Smart Inking tool present on the board





If the Smart Inking Tool is not present on the board, open it by clicking the arrow in the lower right corner. In the options menu, click this icon  and choose "Show SMART Touch Inking Tool".

A new icon will appear  Click the new hand icon to open your stylus color and item options.

Tip #4: *Selecting and erasing using object*

- If you tap the interactive surface with your finger, you perform a left click.
- If you gently tap and hold an area for a couple seconds, a dropdown menu for right click options will appear. Tap to select your option.
- If you touch the interactive surface with an eraser, your palm or the side of your hand, SMART software identifies a large contact area, and you erase digital ink from the screen.

6. When you are finished using the board, press the Power button again to return it to Standby mode.

Tip #5: *Preventing damage to the SmartBoard*

- **DO NOT USE dry erase markers on the SmartBoard.**
- Do not use sharp or pointed objects, such as ballpoint stylus or pointers, on the board.
- Replace the stylus nib (tip) when the nib wears out.

Additional Resources for the SmartBoard 800:

- SmartBoard 800 User Guide: <http://online.carolinacollege.edu/mod/forum/discuss.php?d=28459>
- Get to know your smartboard: https://www.youtube.com/watch?v=oGgKNqZf_20
- Reserve a Training session with your Tech Team member: [HelpDesk Ticket](#)